


**VJ4.ALU – aluminium Vertical Joint trim 4” wide**

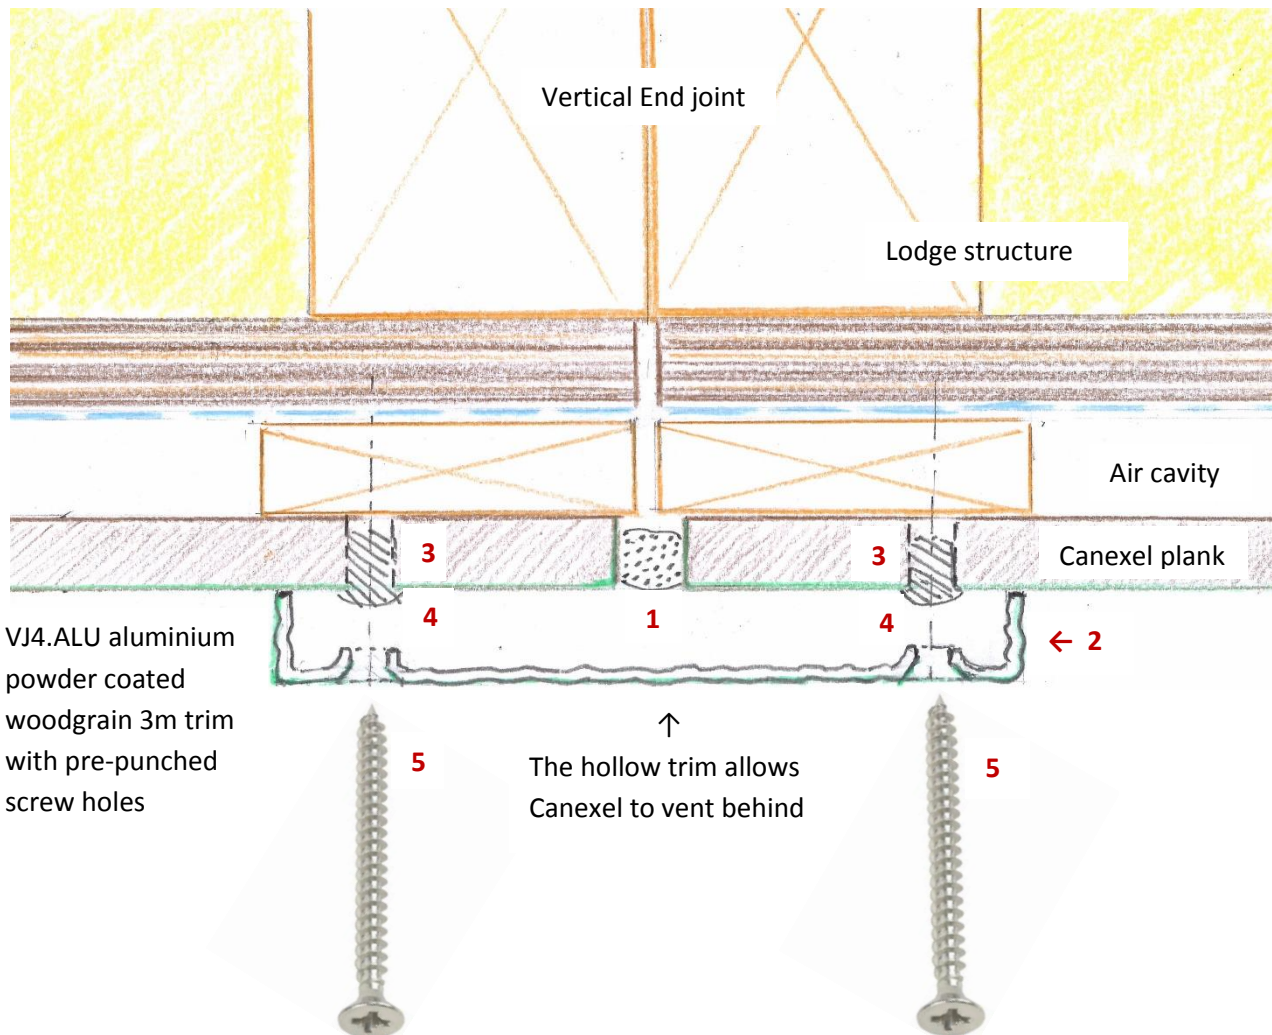

**Installation Instructions**

1. Canixel plank ends must be painted, then fill the gap with foam or caulking to stop water ingress.
2. Position the VJ4 carefully over the gap using spirit level to ensure vertical.
3. Drill 6mm dia holes into the Canixel only (through pre-punched holes).
4. Remove VJ4 and fill holes with sealant (shown hatched).
5. Immediately put the VJ4 back into the correct position and fix with 4mm dia x 50mm long stainless steel countersunk coloured screws provided – tighten with light torque setting to avoid denting the VJ4 (The sealant will ensure the screw holes in the Canixel are protected from driven rain).

**Note:**

- a) The side joints do not need to be sealed against the Canixel.
- b) VJ4.ALU is supplied in packs of 3 x 3m long, complete with colour matched screws
- c) The VJ4.ALU trim is 4 inches /100mm wide – other widths special order